

Bird Nesting Box Assembly Instructions

Back



Bottom



Left Side



Right Side



Top



Front(Door)



Bag of Screws



Bag contains:

- 17 Robertson Screws
- 2 Large Robertson Bolts




Tools Required:

**#2 Robertson Screwdriver
(not supplied)**


Step 1: Place the Bottom panel on a flat surface. Please note that there are holes drilled on 3 of the 4 edges of the Bottom panel. The side with no holes will be at the front of the bird house.



Step 2: Line the Back panel up with the Bottom panel so that it sits opposite the side with no holes drilled. Use the Robertson screwdriver to insert 2 Robertson Screws through the Back panel into the Bottom panel.

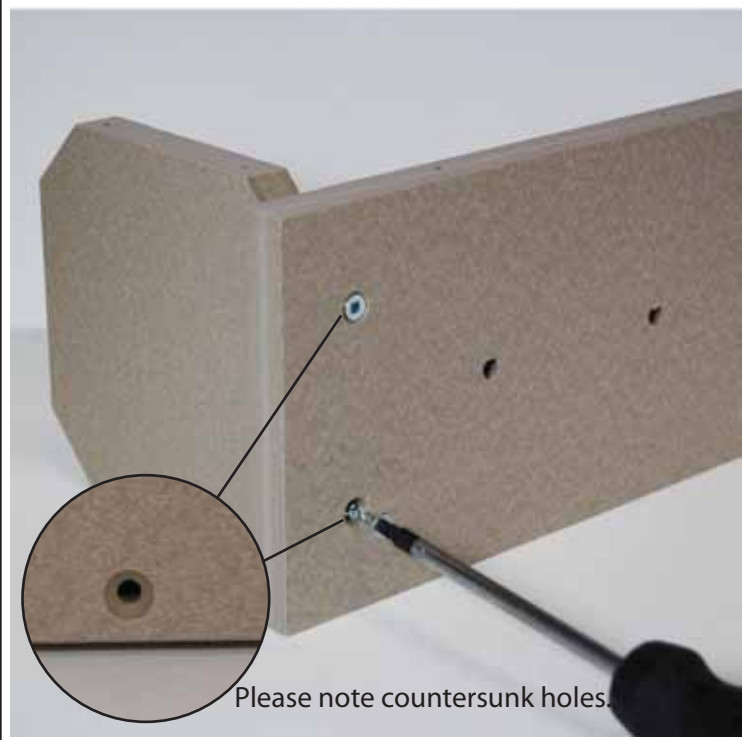


Step 3: Turn the bird house on its side (refer to photo) and lay the Right Side panel on top of the bird house. Line up the 4 countersunk screw holes with the holes on the Back and Bottom panels of the bird house. Use the Robertson Screwdriver to insert 4 Robertson Screws through the Right Side panel in to the Back and Bottom panels.

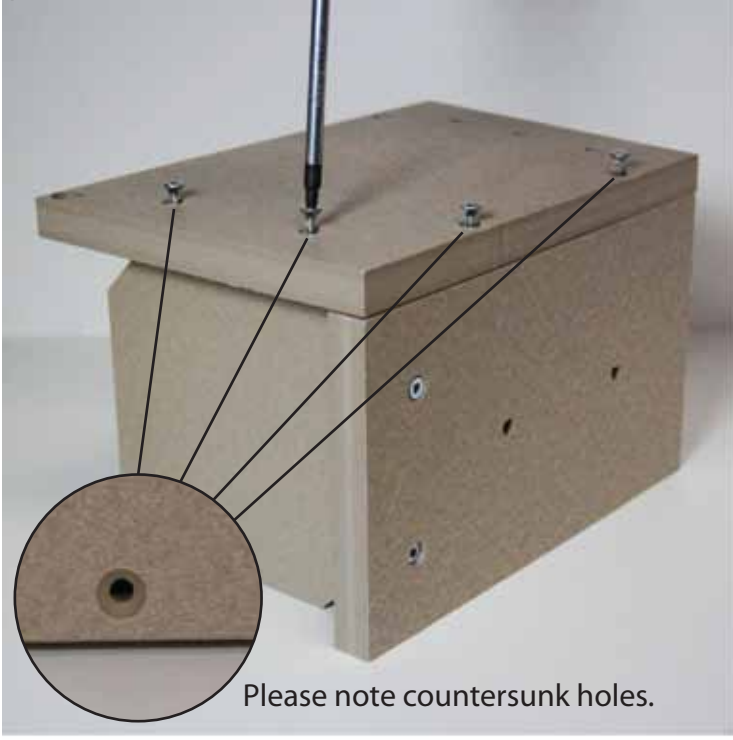

Step 4: The bird house should now look like this.



Step 5: Turn the bird house over so that the Right Side panel is now resting on the table. Repeat the process in step 3 for the Left Side panel.

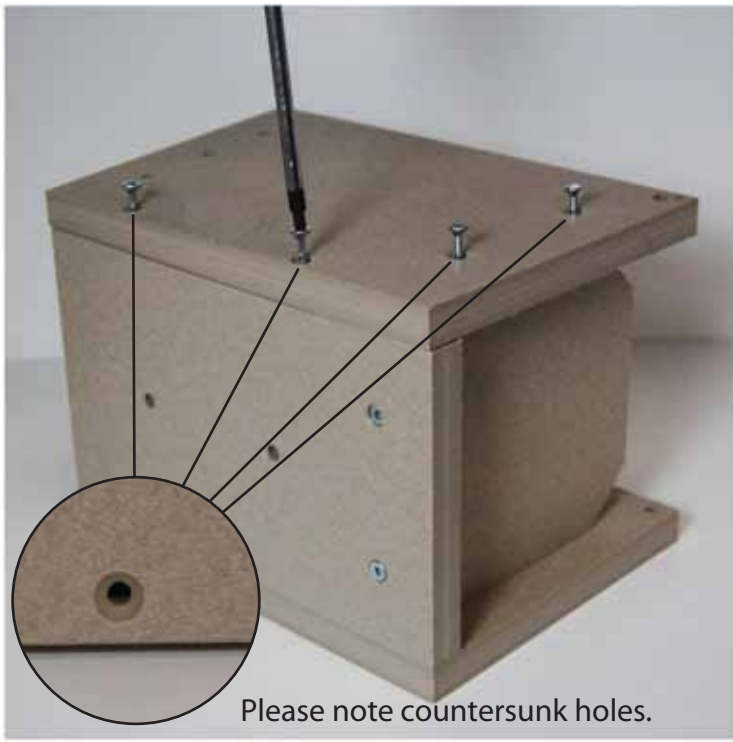

Step 6: The bird house should now look like this.



Step 7: Turn the bird house back over so that the Bottom panel is resting on the table.



Step 8: Place the Top panel onto the top of the bird house. Be sure to have the grooves facing up. Insert 6 Robertson Screws through the top panel into the Left, Right and Back panels.



Step 9: Make sure all screws are tightened and that your bird house looks the same as the picture below.



Step 10: Find your Front(Door) panel with the hole and "ladder" pattern. The side with the short "ladder" will be on the outside of the birdhouse and the side with the long "ladder" will be on the inside of the birdhouse.



Step 11: Place the Front(Door) panel into the front of the birdhouse so that the large holes on the side of the Front panel line up with the large holes in the Left and Right Side panels. Insert the Large Robertson Bolts through the large holes in the Left and Right Side panels into the Front panel.



Step 12: Open the door to your bird house to be sure that everything is working properly.



Step 13: Using a permanent marker, write a number on one side of your box. Write the same number on the inside of the door. If the number on the outside fades, you will still know which box you are monitoring. Numbering your boxes ensures that your records remain consistent throughout the monitoring season. Be sure to put a different number on each box.



Step 14: The hole at the top of the Left Side panel of the bird house is used to "lock" the birdhouse to keep raccoons and other predators out. Remember to bring your Robertson Screwdriver out with you when you go to monitor the bird houses or you won't be able to get in!

